


Instrument Panel Fuse Box (1995-1996 Blazer, Bravada, Jimmy)

troubleshootmyvehicle.com/gm/4.3L-5.0L-5.7L/blazer-fuse-box

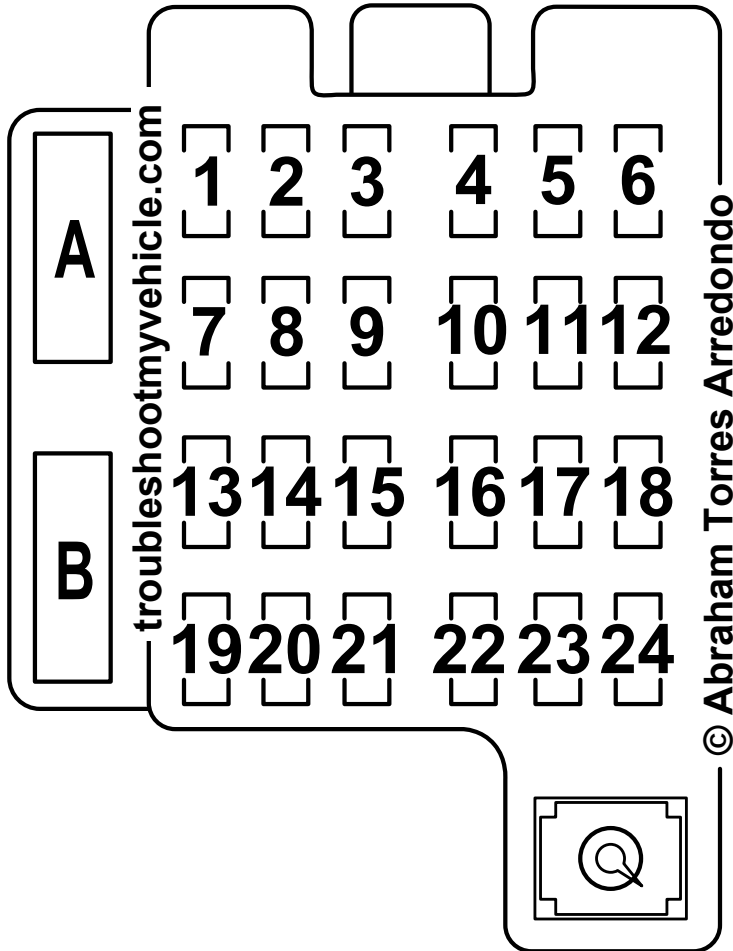

1995-1996
Blazer
Bravada
Jimmy
Fuse Box

DIY Tutorial Depot:
troubleshootmyvehicle.com

Fuse #	Amps	Fuse Name/Description
A	20 Amps	PWR-ACCY (Circuit Breaker) <ul style="list-style-type: none"> Power Door Locks.
B	30 Amps	PWR-WDO (Circuit Breaker) <ul style="list-style-type: none"> Power Windows.
1	20 Amps	STOP-HAZ <ul style="list-style-type: none"> Stoplights and Hazard Warning Lights. Chime Module

Instrument Panel Fuse Box (1995-1996 Blazer, Bravada, Jimmy)

troubleshootmyvehicle.com/gm/4.3L-5.0L-5.7L/blazer-fuse-box

Fuse #	Amps	Fuse Name/Description
2	20 Amps	HORN-DIM <ul style="list-style-type: none"> • Dome and Glove Box Lights. • Lighted Visor Mirror, Horn. • I/P Courtesy Light. • Cigar Lighter. • Lift Gate Glass Release. • Power Mirror. • Endgate Lock Switch. • Keyless Entry.
3	20 Amps	T/L-CTSY <ul style="list-style-type: none"> • Electric Shift Transfer Case Module. • Parking Lights. • License Plate Light
4	20 Amps	GAUGES <ul style="list-style-type: none"> • Automatic Transmission. • Alternator Field. • Variable Throttle Control. • A/C Compressor. • Instrument Cluster. • Chime Module. • 4 WD Indicator Light. • Heated O2 Sensor. • Daytime Running Lights Module. • Rear Window Defog Switch. • Keyless Entry.
5	20 Amps	ENG 1 <ul style="list-style-type: none"> • Linear EGR Valve. • Evaporative Emissions Canister Purge Solenoid. • Heated O2 Sensor #1 and #2. • Camshaft Position Sensor. • Vehicle Control Module. • Powertrain Control Module.
6	25 Amps	HTR-A/C <ul style="list-style-type: none"> • HVAC Select Switch. • Air Valve Actuator Motor.
7	25 Amps	PWR AUX <ul style="list-style-type: none"> • Auxiliary Power Outlets. • Data Link Connector.

Instrument Panel Fuse Box (1995-1996 Blazer, Bravada, Jimmy)

troubleshootmyvehicle.com/gm/4.3L-5.0L-5.7L/blazer-fuse-box

Fuse #	Amps	Fuse Name/Description
8	30 Amps	RR DEFOG <ul style="list-style-type: none"> • Rear Window Defog Switch.
9	15 Amps	ECM BAT <ul style="list-style-type: none"> • Fuel Injection Computer (Battery). • ABS (Battery). • Fuel Pump.
10	10 Amps	ECM IGN <ul style="list-style-type: none"> • Fuel Injection Computer. • Fuel Injector(s). • Engine Sensors.
11	20 Amps	RADIO <ul style="list-style-type: none"> • Radio. • Inside Rear View Mirror Map Lights. • Rear Window Wiper/Washer. • Driver Information Display Control Module.
12	--	NOT USED
13	15 Amps	RDO BATT <ul style="list-style-type: none"> • Clock. • Radio Battery. • CD Player.
14	5 Amps	ILLUM <ul style="list-style-type: none"> • Cluster Illumination. • Ash Tray Lamp. • Radio Illumination. • Heater Lamp. • 4WD Illumination. • Chime Module. • Fog Lamp Switch Illumination. • Daytime Running Lights
15	10 Amps	DRL <ul style="list-style-type: none"> • Daytime Running Lamps Relay (Canada).
16	15 Amps	TURN B/U <ul style="list-style-type: none"> • Turn Signal and Back Up Lights.
17	25 Amps	WIPER <ul style="list-style-type: none"> • Windshield Washers.

Instrument Panel Fuse Box (1995-1996 Blazer, Bravada, Jimmy)

troubleshootmyvehicle.com/gm/4.3L-5.0L-5.7L/blazer-fuse-box

Fuse #	Amps	Fuse Name/Description
		<ul style="list-style-type: none"> • Windshield Wiper Motor.
18	15 Amps	BRAKE <ul style="list-style-type: none"> • Speedometer. • ABS System. • Cruise Control.
19	20 Amps	4WD <ul style="list-style-type: none"> • Transfer Case Shift Control Module.
20	10 Amps	CRANK <ul style="list-style-type: none"> • Diagnostic Energy Reserve Module (DERM).
21	20 Amps	FOG <ul style="list-style-type: none"> • Fog Lamps Relay.
22	10 Amps	AIR BAG <ul style="list-style-type: none"> • Inflatable Restraint Arming Sensor. • Inflatable Restraint Diagnostic Energy Reserve Module (DERM).
23	10 Amps	TRANS <ul style="list-style-type: none"> • Automatic Transmission.
24	10 Amps	PRNDL <ul style="list-style-type: none"> • Instrument Cluster.